

MODEL-SPECIFIC INSTRUCTIONS

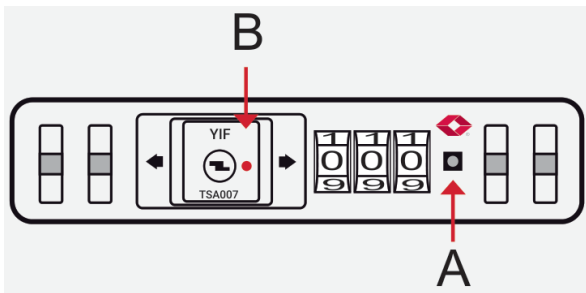
Set a sliding-control lock

For the DELSEY dual-compartment mechanism

TRE01627 / JYA401IC1

Before you begin

Match this reference and the A/B controls to your lock. Know the current combination. TSA007 alone is not enough to select a reset method.

**A Reset control**

Slide and return

B Release control

Select compartment

Control diagram: DELSEY, TRE01627. Match the exact mechanism before proceeding.

1

Unlock the required compartment

Enter the current combination. Use 000 only if the factory setting has not been changed. Move release slider B towards the top of the case for the front pocket, or towards the bottom for the main compartment.

2

Slide reset control A

With the lock open, use a pen tip to slide A until it clicks. Identify A from the manufacturer's diagram; do not insert the pen into the keyhole.

3

Choose your new digits

Turn the three number wheels to your chosen combination. Read the digits at the same alignment used to open the lock. Keep a private record of the new code.

4

Return A to its starting position

Slide reset control A back to its original position. This is the saving step for this mechanism. The new combination is now set.

CHECK, KEEP & GET HELP

Finish with confidence

The detail that matters

Opening B and resetting A are different actions. On this mechanism, B selects which compartment opens; A must slide back to finish setting.

Before relying on the new code

Confirm that the setting control has returned to normal and follow the applicable manufacturer instructions to check opening and closing. Do not force the case or rely on an unconfirmed code before your trip.

Changing a code later

Start with the code that currently opens the lock, then repeat this guide's setting sequence. Returning the wheels to 000 does not restore a changed combination.

If something behaves differently

If the front pocket opens when you wanted the main compartment, check the direction of B against the original guide. Do not reset the code simply to change which compartment opens. If the normal action still fails, stop and ask for model-specific support.

If you have forgotten the combination

This guide changes a known code; it is not a recovery procedure. Check your saved code and DELSEY's current support guidance. Confirm assistance with the retailer or a qualified luggage repair specialist before travelling.

What to send SHONATI

Provide the model or SKU, a clear lock and product-label photograph, whether the case and latch are open or closed, the affected compartment and what happened. Hide the combination and personal details. Photograph rear controls only if already accessible.

Contact SHONATI

shonati.com/contact-us | Sharjah & Wafi City, Dubai

Source & scope

Prepared independently by SHONATI from DELSEY's TRE01627 / JYA401IC1 instructions. DELSEY remains the product manufacturer. This is not a DELSEY-issued manual or a SHONATI physical test. Use the exact manufacturer instructions if your controls differ.

[Open the original DELSEY PDF and labelled lock diagram](#)

Technical reference checked: 22 October 2026. SHONATI edition 1.1.